



M44
Smart
SMART



M44
Smart
SMART



M 48
PRIME

WURT
PRIME





M48
PRIME



KURT
HUNE

M 48
Smart
SMART



M
48

M48
Smart
SMART

KURT
THUNE

M48
Smart
SMART



M48
Smart
SMART

KURT
THUM

M50
Smart nos.
SMART V



M50
Smart nos.
SMART V

M50
#6
HL



KURT
THUNE

M50
HL



KURT
THUNE

M50
Smart
SMART



M50
Smart
SMART



M52
PRIME
PROTO



M
C52

M52
PRIME
PROTO



M52
PRIME
PROTO



C52

M52
PRIME
PROTO



M52
PRIME
PROTO



M
C52

M52
PRIME
PROTO



M52
PRIME
PROTO

PRIME



C52 M

M52
PRIME
PROTO



KURT
HUNG

M52
SMART



M52
Sangat
SMART



Handwritten text on a clear plastic label on the left leg.

M52
X.9



KURT THUNE

M52
X.9



KURT
THUNE

M26
(C054)
SMART



CARE INSTRUCTIONS FOR SHOOTING CLOTHING

A shooting jacket should always be transported and stored without bending it at waist. Always keep your jackets and pants in your equipment bag. Shooting shooting clothes get wet they should be washed. If the clothes hang in room temperature.

Canvas
Shooting clothing should never be washed, because water can harm the treatment that keeps the canvas stiff. In addition, the leather parts may give off their colour to the white canvas if the jacket gets wet. The black canvas may get some scratches when used. To remove those white marks you can slightly rub the canvas with a wet cotton cloth. Do not use too much water.

Leather
Leather parts can be wiped with a moist cloth. You can use leather detergents for cleaning the leather parts.



Clarino (material on left front that looks like suede)
Clarino is artificial material and suede detergents are not suitable for cleaning it. Never apply suede detergent on clarino! You can try to clean clarino parts only with detergents meant for normal clothes.



M 26
(054)
SMART



KURT
THUNE

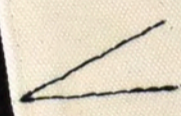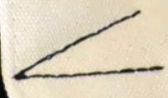

M 58
HL
HL

C58

M58
HL